




- Before connecting the devices to the UPS, you must check the nominal working voltage, current and polarity of the load, then adjust the voltage of the UPS to the corresponding load voltage, confirm that the corresponding port is correct then connect to the load to prevent the machine from being burned out by connecting the wrong voltage.
- 2. Each output terminal of this model has independent output power protection and short-circuit protection, and has a general power protection mechanism. The power of the load connected to all ports cannot exceed the defaulted output power. Otherwise, the corresponding port will turn off. When the total power setting is exceeded, the 4 power indicator lights will flash at the same time and all output ports will turn off. Please remove the overloaded load. The UPS will restart every 5 seconds. UPS work continuously when the load within overload protection range.
- 3. Press and hold the power button for 2-3 seconds to start the UPS. If the 9V or 12V indicator light is green, it indicates that the DC port is outputting voltage. By moving the DC voltage switch, the output voltage can be selected between 9V and 12V. POE output voltage is 24V. Plug and play USB and Type-C provide stable 5V power supply for digital products.
- 4. After plugging in the AC mains supply, the status indicator turns green, it means AC mode. During the charging process, the power indicator will indicate the battery capacity with 25%, 50%, 75% and 100% power respectively. After disconnecting the grid, the battery backup status indicator will turn red, and the power indicator will turn off from 100%, 75%, 50% to 25%. When the 25% indicator flashes, it means the battery power is very low, and the UPS will stop output at any time.

3

- 5. After the UPS automatically shuts down when the battery is low, it will automatically restart the output when the AC is restored.
- 6. If you do not use it for a long time, please keep it fully charged and press the power switch to OFF state, and keep it in a cool place. It is recommended to charge the battery every 3 months.

## 6. Specifications

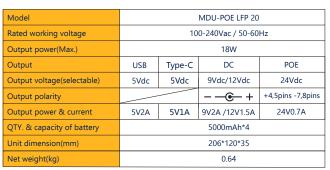

\* Products specifications are subject to change without notice.

## A Warning

- Do check the working voltage, current and polarity of the loads before connecting them to the UPS, then choose the corresponding
- voltage.
- 2. Please charge fully before initial use.
- 3. Dropping, hitting, disassembling and repairing privately are forbidden.
- 4. Do not put the UPS into water or make it wet
- 5. Do not dispose of the UPS in fire or heating it.
- 6. Do not use the UPS in any flammable environments.7. Do not put the UPS in any place where children can reach.

