



MST32A3160K14

MST43B3160K14

User Manual

PREFACE

1. Read this Quick Start Guide before starting Set-up.
2. Then, carefully follow the Instructions, heeding all Warnings.
3. Do Not remove the TV back cover or block the TV ventilation openings.
4. Do Not use the TV near water or a heat Source.
5. Do not pinch or cut the Power Cord.

Note:

The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls

If your existing television set is being retained and relocated, the same considerations as above should be applied.


The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Unpack the TV and Accessories from the Carton Box

1. Please see the unpacking instructions on the top of the carton box (and below).
2. As noted, be careful not to grab or put pressure on the TV screen.
3. Check the carton box carefully for all included Accessories.



DO NOT

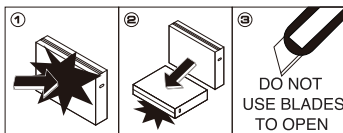

For 32" - 58"



UNPACK
WITH CARE




What You Will Need for Set-up (Not Included)

- Head Screwdriver
- Internet Connection (Needed for Smart TV Streaming)
- Wireless Router (Needed for Smart TV Streaming)
- Computer, Tablet or Smart Phone (Needed for Smart TV Set-Up)

Package Contents



TV x 1pcs

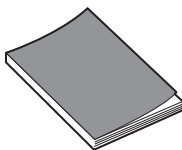

Quick Start Guide x 1pcs



Remote Control x 2pcs



AAA Batteries for
Remote x 2 pcs





Table Stands x 2 pcs



Screws for Table
Stands x 2 pcs

Wallmounting Installation (optional)

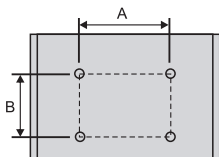

Inches	Specifications VESA (A*B)
32"/43"	200 x 150 mm

The figures and illustrations in this manual are provided for reference only and may differ from their actual appearance.

Note:

1. The bracket fixed on the wall is an optional part.
2. When assembling the TV, there should be no other articles around it and please keep it distant from other articles.
3. When assembling the TV, please ask the professional worker to fix it in order to avoid danger.
4. The fixing picture is only for reference.
5. Please follow the user's manual about bracket assemble to fix the TV.
6. Attach the mounting bracket with the VESA compatible wall mounting kit.

Attach the Table Stands

How to assemble the stand

If you need to remove or assemble the stand please read the following instructions.

-Before attaching/detaching the stand, make sure to turn off the TV.

-Before performing work, spread cushioning over the base area to lay the LED TV on.

This will prevent it from being damaged.


Assembling instruction:

Put the television on the table, fix the stands with four screws given in the carton.

Step1: Fasten the base assembly with 2 screws given in the carton.

Step2: Insert the assembled base into the hole, take out 2 screws provided with TV set and tighten them into screw holes.


- To disconnect the stand from the TV, perform the above steps in reverse order.

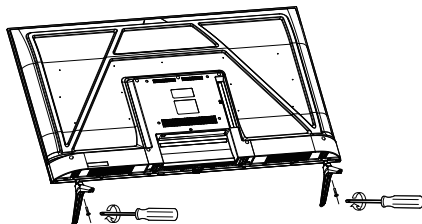


Front panel

The buttons on the lower-right panel control your TV's basic features, including the on-screen menu.

To use the more advanced features, you must use the remote control.

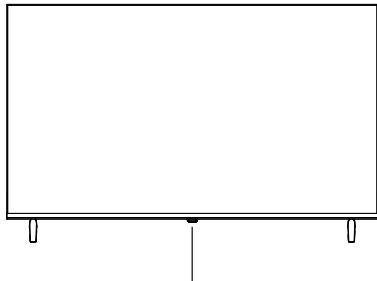


Remote control sensor / Power indicator

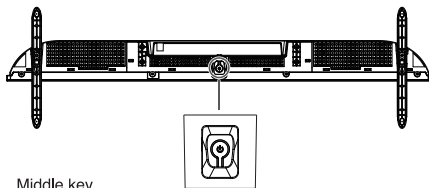

Middle key

Short press the button in standby mode to wake up the machine;
Short press the button in the power on state to call out the button menu, then short press to switch focus, long press to confirm.



power menu input Channel up/down volume +/-

Specifications

Model		MST32A3160K14	MST43B3160K14
Display size		32" Diagonal (max.)	43" Diagonal (max.)
LED panel resolution		1366x768	1920x1080
Speaker output power		≥5Wx2	
Power supply		110-240V, 50 Hz	
Power consumption		50W	75W
Standby consumption		≤0.5W	
Antenna input		75 ohms	
Controller power		DC 3V (Two AAA size batteries)	
Dimensions (LxWxH)	TV with stand	718.4x204.9x478.9mm	954.7x216.5x613.1mm
	TV without stand	718.4x68.5x427.5mm	954.7x72x561.3mm
Weight (Net weight)	TV with stand	3.07kg	5.3kg
	TV without stand	2.99kg	5.25kg
Work temperature		0°C-40°C	


NOTES:





- Design and specifications are subject to change without notice.
- Weight and Dimension shown are approximate.

Connect The TV

1. Insert the female end of the Power Cord into the back of the TV.
Then carefully plug the standard AC plug end into a 110-240V AC outlet.
2. If you are connecting other devices to the TV, utilize the appropriate optional cables and connect to the appropriate ports on the back or side of the TV.

Location of Connections

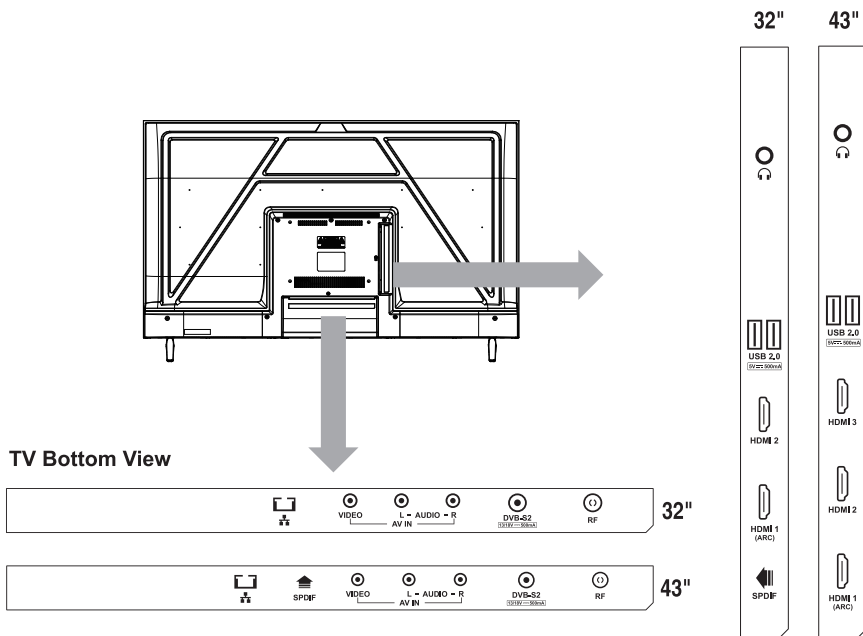

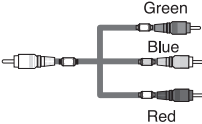TV label		Cable	External Equipment
ANT/CABLE			Antenna  VHF/UHF Antenna Cable ANT OUT  Satellite antenna
HDMI			VIDEO EQUIPMENT   Camcorder
Mini YPbPr			
AV IN	VIDEO	 Yellow	
	L	 White	
	R	 Red	
USB			
SPDIF			 Audio Receiver
HEADPHONE			


The TV can be connected to the following devices: Cable Box, Satellite Box, Antenna, Video Game, Stereo System, Sound Bar, Headphones, Blu-ray Player, DVD Player, VCR, Streaming Box or Stick, Camcorder, etc.

Prepare The Remote Control


Remove the battery cover and insert the provided batteries. Then replace the battery cover.

Installing Batteries



- 1** Open the battery compartment cover on the back side.

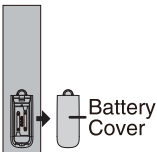

- 2** Insert two 1.5V AAA size batteries in correct polarity. Don't mix old or used batteries with new ones.

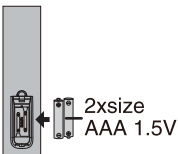

- 3** Closed the cover.

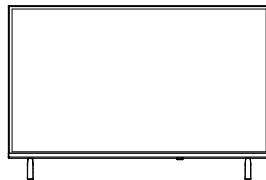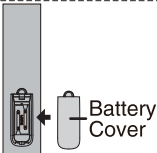

- ✦ The remote control needs to be used within a range of 8 meters in a straight line and 6 meters in a controlled angle.
- ✦ Put the used batteries into the recycling bin since they can negatively affect the environment.

Note:

- 1) Batteries should last approximately one year under normal use (actual use will vary).
- 2) If the TV will remain inactive for an extended period of time, remove the batteries from the remote control to avoid possible damage due to leakage.
- 3) Do not mix old and new batteries or different types of batteries.
- 4) Do not throw batteries into fire or water.
- 5) The batteries (battery pack or batteries installed) should not be exposed to excessive heat such as sunshine, fire or the like.


1. **POWER**: Press to turn TV on or off.
2. **INPUT**: This button is used to switch between different sources.
Select a source and press OK button to confirm.
3. **Digital buttons(0~9)**: Press 0-9 buttons to select a TV channel.
4. **INFO**: Press this button to display source or current program information.
5. **RECALL**: Press this button to return to the previous program.
6. **SOUND**: Press to select sound modes.
7. **PICTURE**: Press to select picture modes.
8. **TV**: Press this button to enter TV source.
9. **HOME**: Press this button to enter the main interface directly.
10. **SETTING**: Press this button to enter system settings.
11. **MENU**: Press to bring up the main menu to the screen.
12. **OK**: Press to confirm selections.
13. **Arrow buttons**: Allows you to navigate on-screen menus and adjust system settings to your preference.
14. **MORE**: Press this button to display "MORE" then use the virtual buttons as a remote to control TV functions.
15. **BACK**: Press to return to previous page.
16. **GUIDE**: Only available for some models.
17. **CH+** and **CH-**: Press to go to the next higher or lower channel.
18. **VOL+** and **VOL-**: Press to increase or decrease the volume.
19. **MUTE**: Press to mute sound, press again to restore sound.
20. **COLOUR BUTTONS**: Program edit as per the On-screen Display menu.
21. **◀◀**: Press this button to rewind in USB Video/Audio playing mode.
22. **▶/II**: Press to Play/Pause in USB Video/Audio playing mode.
23. **▶▶ /TEXT**: Use as forward function in USB Video/Audio playing Mode.

Use as cancel function in ATV Text Mode.

24. **ASPECT**: Press to select the aspect ratio.
25. **I/II / AUDIO LANG**: In ATV source, the button is used to set NICAM sound system.
26. **■/●**: Use as Stop function in USB Video/Audio playing Mode. Use as Recording function in DTV.
27. **SLEEP**: Press to set the sleep time.

Please note: The Sleep Timer will be cancelled once the TV is switched off or if a power failure occurs.

28. **SUBTITLE**: Turning the subtitles on or off in DTV Teletext mode.
29. **REC LIST**: Use as Recording function in DTV.

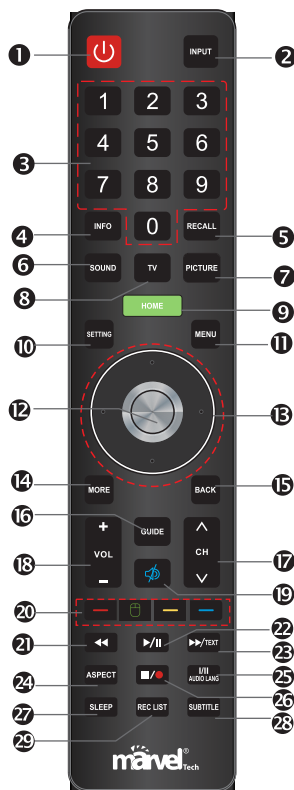

1. **POWER**: Press to turn TV on or off.
2. **INPUT**: This button is used to switch between different sources.
Select a source and press OK button to confirm.
3. **Streaming Service buttons**: If network connects, connects to the Video Streaming Service.
4. **●/REC**: Press this button to burn the current channel stream in DTV state.
5. **MEDIA**: Quickly to open multimedia.
6. **COLOUR BUTTONS** Program edit as per the On-screen Display menu.
7. **VOICE**: Press to open the a voice search.
8. **MENU**: Press to bring up the main menu to the screen.
9. **SETTING** Press this button to enter system settings.
10. **Arrow buttons**: Allows you to navigate on-screen menus and adjust system settings to your preference.
11. **OK**: Press to confirm selections.
12. **BACK**: Press to return to previous page.
13. **EPG**: Press to show/hide the electronic program guide.
14. **HOME**: Press this button to enter the main interface directly.
15. **APP STORE**: Quickly to open APP store.
16. **MUTE**: Press to mute sound, press again to restore sound.
17. **VOL+ and VOL-**: Press to increase or decrease the volume.
18. **CH+ and CH-**: Press to go to the next higher or lower channel.
19. **Digital buttons(0~9)**: Press 0-9 buttons to select a TV channel.
20. **--/**: Reset the entered program number in the DTV channel.
For example, if 12 is entered, pressing this button will clear the entered 12
21. **i**: View the info of the program.



SET-UP THE TV (Using the Remote Control)

Initial Setup

1. Press the "Power" button at the Top of the Remote.
2. Begin at the Initial Setup Menu, select an OSD Language.
3. Select WiFi or Wired Network and go to the setting page, connect the Network.
4. Select the input source. If you select TV, TV will do auto channel tuning.

TV Setup

Press the "MENU" Button, it will display main MENU, there are kinds of function for Image/Sound/Channel/Setting/Time. Press ▼/▲/◀/▶ button to select and adjust as you like.

HOME

Press the "HOME" button to go to HOME page, Press ◀/▶ button to select the app and press "OK" button to open it.

CAUTION:

In Lock Menu, Please remember that initial password is 0000, the default universal password is 4711.

Trouble Shooting

Having trouble?

Don't worry, it's usually an easy fix.

After Auto Tuning only some channels are available	Check your area is covered by Digital Video Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type.
Channel cannot be selected	Check if the channel has been blocked in the main menu settings.
USB not playing	Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported.
Picture is distorted, macroblock, small block, dots, pixelization, etc	Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies.
Noise from speaker	Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion.
TV turns off automatically	Check if the Off Timer is set to On in the Setup menu. Sleep Timer may have been enabled. If there is no signal for about 10 minutes from an input, the TV will turn off.
TV turns on automatically	Check if the On Timer is set to On in the Setup menu.
Picture is not shown in full screen	Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen.





MST32A3160K14

MST43B3160K14

دليل المستخدم

مقدمة

- 1 اقرأ دليل البدء السريع هذا قبل بدء الإعداد.
- 2 ثم اتبع التعليمات بعناية، مع مراعاة جميع التحذيرات.
- 3 لا تقم بإزالة الغطاء الخلفي للتلفزيون أو سد فتحات تهوية التلفزيون.
- 4 لا تستخدم التلفزيون بالقرب من الماء أو مصدر الحرارة.
- 5 لا تضغط على سلك الطاقة أو تقطعه.

ملاحظة:

المنتج والرسوم التوضيحية الواردة في دليل المستخدم هذا هي لأغراض التوضيح فقط وقد تختلف تبعاً للموديل.

تحذير

- لا تضع أبداً جهاز التلفزيون في مكان غير مستقر. قد يسقط جهاز التلفزيون، مما يتسبب في إصابة جسيمة خطيرة أو وفاة. يمكن تجنب العديد من الإصابات، خاصة للأطفال، عن طريق اتخاذ احتياطات بسيطة مثل:
- استخدام الخزانات أو الحامل الموصى بها من قبل الشركة المصنعة لجهاز التلفزيون.
- استخدام الأثاث الذي يمكن أن يدعم جهاز التلفزيون فقط.
- التأكد من أن جهاز التلفزيون لا يتدلى من حافة الأثاث الداعم.
- لا تضع جهاز التلفاز أبداً على أثاث طويل (على سبيل المثال، الخزائن أو أرفف الكتب) دون تثبيت كل من الأثاث وجهاز التلفاز على دعامة مناسبة.
- عدم وضع جهاز التلفزيون على قطعة قماش أو أي مواد أخرى قد تكون موجودة بين جهاز التلفزيون والأثاث الداعم.
- توعية الأطفال بأخطار التسلق على الأثاث للوصول إلى جهاز التلفزيون أو ضوابطه
- إذا تم الاحتفاظ بجهاز التلفزيون الخاص بكم ونقله، فيجب تطبيق نفس الاعتبارات المذكورة أعلاه.


يتم استخدام قابس أو مقرن الجهاز كجهاز فصل، ويجب أن يظل جهاز الفصل قابلاً للتشغيل بسهولة.

أخرج التلفزيون والملحقات من علبة الكرتون

1 يرجى الاطلاع على تعليمات التفريغ في الجزء العلوي من علبة الكرتون (وأدناه).


2 كما لوحظ، احرص على عدم الإمساك بشاشة التلفزيون أو الضغط عليها.

3 قم بالتحقق من علبة كرتون بعناية لجميع الملحقات المدرجة.

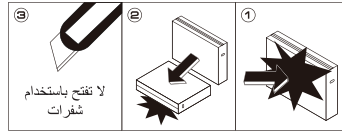

لا تقم

لمقاس 58-32 بوصة

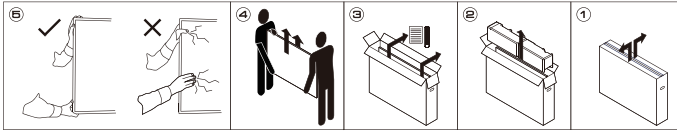

التغليف
بعناية


ما سوف تحتاج إلي اعداد (غير المدرجة)

- مفك براغي رأسية
- اتصال بالإنترنت (مطلوب لبث التلفزيون الذكي)
- راوتر لاسلكي (مطلوب لبث التلفزيون الذكي)
- كمبيوتر أو جهاز لوحي أو هاتف ذكي (مطلوب لإعداد التلفزيون الذكي)

محتويات الحزمة



جهاز تحكم عن بعد 2 × قطعة

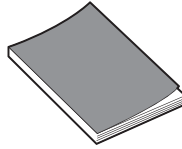


دليل بدء سريع 1 × قطعة



تلفزيون 1 × قطعة



براغي لحامل
الطاولة 2 × قطعة




حامل الطاولة 2 × قطعة



بطاريات AAA لجهاز التحكم عن بعد
2 × قطعة

تركيب الحائط (اختياري)

المواصفات (A*B) VESA	بوصة
150 × 200 ملم	32"/43"

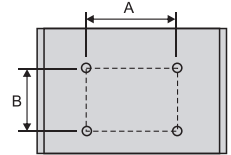

الرسوم التوضيحية والأشكال في هذا الدليل للمرجعية فقط وقد تختلف عن الشكل الفعلي.

ملاحظة:


- 1 الحامل المثبت على الجدار جزء اختياري.
- 2 عند تركيب التلفزيون، يجب التأكد من عدم وجود أشياء أخرى حوله وإبقائه بعيداً عن الأشياء الأخرى.
- 3 عند تركيب التلفزيون، يرجى الاستعانة بفني مختص لضمان السلامة.
- 4 صورة التثبيت للمرجعية فقط.
- 5 يرجى اتباع تعليمات دليل المستخدم الخاصة بتجميع الحامل لتثبيت التلفزيون.
- 6 قم بتثبيت الحامل باستخدام مجموعة التثبيت على الجدار المتوافقة مع VESA.

إرفاق حامل الطاولة

- كيفية تجميع الحامل
- إذا كنت بحاجة إلى فك أو تركيب الحامل، يرجى قراءة التعليمات التالية.
- قبل تركيب/فصل الحامل، تأكد من إيقاف تشغيل التلفزيون.
- قبل بدء العمل، ضع وسادة حماية على قاعدة الجهاز لوضع تلفزيون LED عليها.
- هذا سيمنعه من التلف.


تعليمات التجميع:

- ضع التلفزيون على الطاولة، ثبت الحوامل بأربعة مسامير موجودة في الكرتون.
- الخطوة 1: ثبت مجموعة القاعدة باستخدام البراغي الاثنين المرفقين في الكرتون.
- الخطوة 2: أدخل القاعدة المجهزة في الفتحة، ثم استخدم البرغيين المرفقين مع جهاز التلفزيون لتثبيتهما في فتحات البراغي.
- لفصل الحامل عن التلفزيون، قم بتنفيذ الخطوات المذكورة أعلاه بترتيب عكسي.

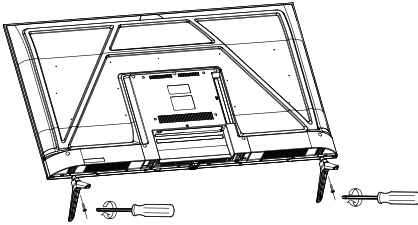


اللوحة الأمامية

- الأزرار الموجودة على اللوحة اليمنى السفلية تتحكم في الميزات الأساسية للتلفزيون، بما فيها القائمة على الشاشة.
- لاستخدام الوظائف الأكثر تقدمًا، يجب عليك استخدام جهاز التحكم عن بُعد.

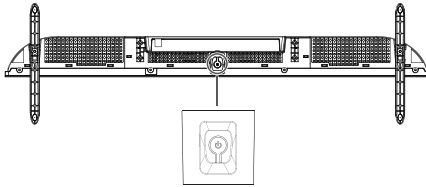

المفتاح الأوسط

- اضغط ضغطة قصيرة على الزر في وضع الاستعداد لتنشيط الجهاز؛
- اضغط ضغطة قصيرة على الزر أثناء التشغيل لإظهار قائمة الأزرار، ثم اضغط ضغطة قصيرة للتنقل بين الخيارات وضغطه طويلة للتأكيد.



مستشعر التحكم عن بعد ومؤشر الطاقة

المواصفات

النموذج	MST32A3160K14	MST43B3160K14
حجم شاشة العرض	32 بوصة قطري (بحد أقصى)	43 بوصة قطري (بحد أقصى)
دقة لوحة LED	768× 1366	1080× 1920
قوة مخرج مكبر الصوت	≤5 واط×2	
مزود الطاقة	110-240 فولت، 50 هرتز	
استهلاك الطاقة	50 واط	75 واط
الاستهلاك في وضع الاستعداد	≥0.5 واط	
مدخل الهوائي	75 أوم	
قوة جهاز التحكم	تيار مستمر 3 فولت (بطاريتان من نوع AAA)	
الأبعاد (الطول × العرض × الارتفاع)	التلفزيون مع حامل	478.9×204.9×718.4 ملم
	تلفزيون بدون حامل	427.5×68.5×718.4 ملم
الوزن (الوزن الصافي)	التلفزيون مع حامل	3.07 كجم
	تلفزيون بدون حامل	2.99 كجم
درجة حرارة العمل	0 درجة مئوية - 40 درجة مئوية	

ملاحظات:

- التصميم والمواصفات قابلان للتغيير دون إشعار مسبق.
- الوزن والأبعاد المذكورة تقريبية.

قم بتوصيل التلفزيون


1 أدخل الطرف الأنثوي لسلوك الطاقة في الجزء الخلفي من التلفزيون.

ثم قم بتوصيل طرف قابس الطاقة بالتيار المتردد القياسي بعناية بمخرج الطاقة بالتيار المتردد 110-240 فولت.



2 إذا كنت تقوم بتوصيل أجهزة أخرى بالتلفزيون، فاستخدم الكابلات الاختيارية المناسبة واتصل بالمنافذ المناسبة في الجزء الخلفي أو الجانبي من التلفزيون.



موقع الاتصالات

32" 43"

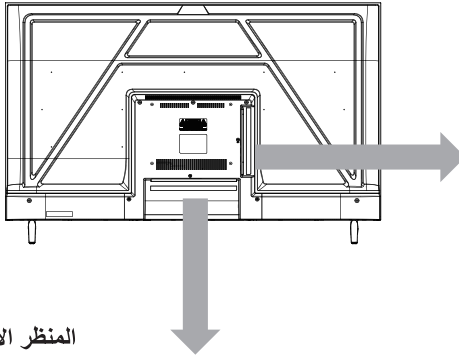

المنظر الأسفل التلفزيون

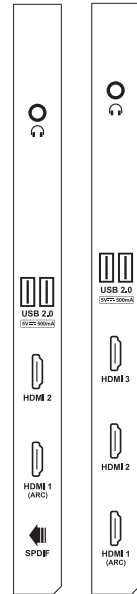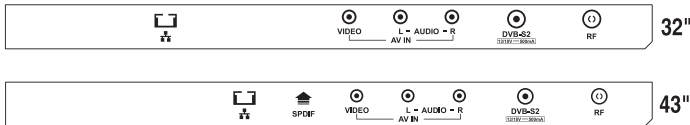

ملصق التلفزيون	الكابل	المعدات الخارجية
ANT/CABLE		الهوائي  
HDMI		معدات الفيديو  كاميرا الفيديو 
Mini YPbPr		
الفيديو	 الأصفر	
L	 الأبيض	
R	 الأحمر	
USB		
SPDIF		جهاز استقبال الصوت 
سماعة الرأس		

يمكن توصيل التلفزيون بالأجهزة التالية: علبة الكابلات، علبة الأقمار الصناعية، الهوائي، لعبة فيديو، نظام ستيريو، شريط الصوت، سماعات، مشغل بلو راي، مشغل دي في دي، VCR، علبة أو قضيب التدفق، كاميرا الفيديو، الخ.

إعداد جهاز التحكم عن بعد

أزل غطاء البطارية وأدخل البطاريات المزودة. ثم أعد وضع غطاء البطارية.

تركيب البطاريات

1 افتح غطاء حجرة البطارية على الجانب الخلفي.

1

غطاء
البطارية

2 أدخل بطاريتين من نوع AAA بجهد 1.5 فولت مع مراعاة القطبية الصحيحة. لا تخلط البطاريات القديمة أو المستعملة مع البطاريات الجديدة.

2

2 x البطارية بنوع
AAA بـ 1.5 فولت

3 ألقِ الغطاء.


3

✦ يجب استخدام جهاز التحكم عن بُعد ضمن نطاق 8 أمتار في خط مستقيم و6 أمتار ضمن زاوية.

✦ ضع البطاريات المستعملة في سلة إعادة التدوير لأنها قد تضر بالبيئة.

ملاحظة:

- 1) ينبغي أن تدوم البطاريات لمدة عام تقريباً في ظل الاستخدام العادي (سيختلف الاستخدام الفعلي).
- 2) إذا ظل التلفاز متعطل لفترة طويلة من الوقت، فقم بإزالة البطاريات من جهاز التحكم عن بعد لتجنب التلف المحتمل بسبب التسرب.
- 3) لا تخلط البطاريات القديمة والجديدة أو أنواع مختلفة من البطاريات.
- 4) لا تقم برمي البطاريات في النار أو الماء.
- 5) يجب ألا تتعرض البطاريات (مجموعة البطاريات أو البطاريات المثبتة) للحرارة الزائدة مثل أشعة الشمس أو النار أو ما شابه ذلك.

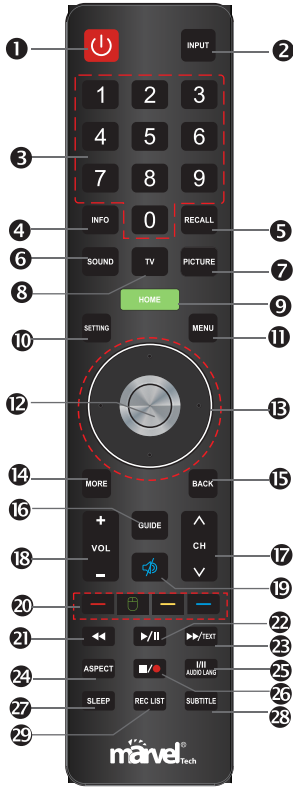

- 1 الطاقة: اضغط لتشغيل التلفزيون أو إيقافه.
- 2 الإدخال : يُستخدم هذا الزر للتبديل بين المصادر المختلفة.
حدد مصدر الإدخال ثم اضغط الزر OK للتأكيد.
- 3 الأزرار الرقمية (0-9): اضغط الأزرار من 0 إلى 9 لاختيار قناة تلفزيونية.
- 4 المعلومات: اضغط هذا الزر لعرض معلومات المصدر أو البرنامج الحالي.
- 5 الرجوع اضغط هذا الزر للعودة إلى البرنامج السابق.
- 6 الصوت: اضغط لاختيار أوضاع الصوت.
- 7 الصورة: اضغط لاختيار أوضاع الصورة.
- 8 التلفزيون اضغط هذا الزر للدخول إلى مصدر التلفزيون.
- 9 الواجهة الرئيسية: اضغط هذا الزر للدخول مباشرة إلى الواجهة الرئيسية.
- 10 الإعدادات: اضغط هذا الزر للدخول إلى إعدادات النظام.
- 11 قائمة: اضغط لإظهار القائمة الرئيسية على الشاشة.
- 12 موافق: اضغط لتأكيد الاختيارات.
- 13 أزرار السهام: تتيح لك التنقل في القوائم على الشاشة وضبط إعدادات النظام حسب تفضيلاتك.
- 14 أكثر: اضغط هذا الزر لعرض "MORE" ثم استخدم الأزرار الافتراضية لجهاز تحكم عن بُعد للتحكم في وظائف التلفزيون.
- 15 خلف: اضغط للعودة إلى الصفحة السابقة.
- 16 مرشد: متوفر لبعض الموديلات فقط.
- 17 +CH و -CH: اضغط للانتقال إلى القناة التالية الأعلى أو الأدنى.
- 18 +VOL و -VOL: اضغط لزيادة أو خفض مستوى الصوت.
- 19 كتم الصوت: اضغط لكتم الصوت، واضغط مرة أخرى لاستعادة الصوت.
- 20 الأزرار الملونة: تحرير البرامج كما هو موضح في قائمة العرض على الشاشة.
- 21 ◀◀: اضغط هذا الزر للترجيع في وضع تشغيل الفيديو/الصوت عبر USB.
- 22 ▶/II: اضغط لتشغيل/إيقاف مؤقت في وضع تشغيل الفيديو/الصوت عبر USB.
- 23 ▶▶/نص: يُستخدم كوظيفة تقديم سريع في وضع تشغيل الفيديو/الصوت عبر USB. يُستخدم كوظيفة إلغاء في وضع نص ATV.
- 24 نسبة العرض إلى الارتفاع: اضغط لاختيار نسبة العرض إلى الارتفاع.
- 25 I/II لغة الصوت: في وضع مصدر ATV، يُستخدم هذا الزر لتعيين نظام الصوت NICAM.
- 26 ■/●: استخدم هذه الوظيفة للإيقاف في وضع تشغيل الفيديو/الصوت عبر USB. يُستخدم كوظيفة تسجيل في وضع DTV.
- 27 النوم: اضغط لضبط مؤقت السكون.
- 28 يرجى الملاحظة: سيتم إلغاء مؤقت السكون عند إيقاف تشغيل التلفزيون أو عند حدوث انقطاع في التيار الكهربائي.
- 29 الترجمة تشغيل أو إيقاف الترجمة في وضع النص التلفزيوني لـ DTV.
- 29 قائمة التسجيلات: يُستخدم كوظيفة تسجيل في وضع DTV.



- 1 الطاقة: اضغط لتشغيل التلفزيون أو إيقافه.
- 2 الإدخال: يُستخدم هذا الزر للتبديل بين المصادر المختلفة.
- حدد مصدر الإدخال ثم اضغط الزر OK للتأكيد.
- 3 أزرار خدمة البث: في حال الاتصال بالشبكة، يتم الاتصال بخدمة بث الفيديو.
- 4 التسجيلات: اضغط هذا الزر لحفظ بث القناة الحالية في وضع DTV.
- 5 الوسائط: الوصول السريع إلى الوسائط المتعددة.
- 6 الأزرار الملونة: تعديل البرنامج حسب قائمة العرض على الشاشة.
- 7 صوت: اضغط لفتح ميزة البحث الصوتي./
- 8 قائمة: اضغط لإظهار القائمة الرئيسية على الشاشة.
- 9 الإعدادات: اضغط هذا الزر للدخول إلى إعدادات النظام.
- 10 أزرار السهام: تتيح لك التنقل في القوائم على الشاشة وضبط إعدادات النظام حسب تفضيلاتك.
- 11 موافق: اضغط لتأكيد الاختيارات.
- 12 خلف: اضغط للعودة إلى الصفحة السابقة.
- 13 دليل البرامج الإلكتروني: اضغط لإظهار أو إخفاء دليل البرامج الإلكتروني.
- 14 الواجهة الرئيسية: اضغط هذا الزر للدخول مباشرة إلى الواجهة الرئيسية.
- 15 متجر التطبيقات: الوصول السريع إلى متجر التطبيقات.
- 16 كتم الصوت: اضغط لكتم الصوت، واضغط مرة أخرى لاستعادة الصوت.
- 17 VOL+ و VOL-: اضغط لزيادة أو خفض مستوى الصوت.
- 18 CH+ و CH-: اضغط للانتقال إلى القناة التالية الأعلى أو الأدنى.
- 19 الأزرار الرقمية (0~9): اضغط الأزرار من 0 إلى 9 لاختيار قناة تلفزيونية.
- 20 +/-: إعادة تعيين رقم البرنامج المدخل في قناة DTV.
- على سبيل المثال، إذا تم إدخال الرقم 12، فإن الضغط على هذا الزر سيمسح الرقم 12 المدخل.
- 21 ①: عرض معلومات البرنامج.

إعداد التلفزيون (باستخدام جهاز التحكم عن بُعد)

الإعداد الأولي

- 1 اضغط على زر الطاقة في الجزء العلوي من جهاز التحكم عن بُعد.
- 2 ابدأ من قائمة الإعداد الأولي، ثم حدد لغة عرض الشاشة (OSD).
- 3 حدد شبكة WiFi أو شبكة سلكية، ثم انتقل إلى صفحة الإعداد وقم بتوصيل الشبكة.
- 4 اختر مصدر الإدخال. إذا قمت باختيار التلفزيون، فسيقوم الجهاز ببحث تلقائي عن القنوات.

إعداد التلفزيون

اضغط على الزر "القائمة" لعرض القائمة الرئيسية، والتي تحتوي على وظائف متعددة مثل: الصورة/الصوت/القنوات/الإعدادات/الوقت. اضغط على الزر ◀/▶/▲/▼ لتحديد وتعديل الخيارات حسب رغبتك.

الصفحة الرئيسية

اضغط على الزر "الواجهة الرئيسية" للانتقال إلى الصفحة الرئيسية، واستخدم الزر ▶/◀ لتحديد التطبيق واضغط على الزر "موافق" لفتحه.

تنبيه:

في قائمة القفل، يرجى تذكر أن كلمة المرور الافتراضية هي 0000، وكلمة المرور العالمية الافتراضية هي 4711.

استكشاف الأخطاء وإصلاحها

هل تواجه مشكلة؟

لا داعي للقلق، فغالبًا ما يكون الحل بسيطًا.

بعد التوليف التلقائي، لا تتوفر إلا بعض القنوات	قم بالتحقق من أن منطقتكم مغطاة ببث الفيديو الرقمي. حاول إعادة ضبط القنوات المفقودة أو ضبطها يدويًا. قم بالتأكد من أنكم تستخدم نوع الهوائي الصحيح.
لا يمكن اختيار القناة	قم بالتحقق مما إذا كانت القناة محظورة في إعدادات القائمة الرئيسية.
USB لا يشغل	يرجى التحقق من توصيل كابل USB وتوصيل مصدر الطاقة. لم تتم تهيئة القرص الصلب. يرجى التأكد من أن قرص USB يكون متوافقًا وأن تكون تنسيقات بيانات الوسائط المتعددة مدعومة.
الصورة هي مشوهة، ماكروبلوك، كتلة صغيرة، نقاط، بكسل، إلخ	قد يتسبب ضغط محتويات الفيديو في حدوث تشويه خاصة في الصور سريعة الحركة مثل الأفلام الرياضية وأفلام الحركة.
الضوضاء من السماعه	قم بالتحقق من توصيلات الكابل، وقم بالتأكد من عدم توصيل كابل الفيديو بمدخل صوتي. قد يؤدي انخفاض مستوى الإشارة إلى تشويه الصوت.
يتم إيقاف تشغيل التلفزيون تلقائيًا	تحقق مما إذا كان مؤقت إيقاف التشغيل مضبوطًا على التشغيل في قائمة الإعداد. قد تم تمكين مؤقت النوم. إذا لم تكن هناك إشارة لمدة 10 دقائق تقريبًا من المدخل، فسيتم إيقاف تشغيل التلفزيون.
يتم تشغيل التلفزيون تلقائيًا	قم بالتحقق مما إذا كان يتم ضبط مؤقت التشغيل على التشغيل في قائمة الإعداد.
لا تظهر الصورة في وضع ملء الشاشة	ستظهر الأشرطة السوداء على كل جانب على قنوات عالية الدقة عند عرض محتويات SD (3:4). سيتم عرض الأشرطة السوداء في الجزء العلوي والسفلي على الأفلام التي لها نسب عرض إلى ارتفاع مختلفة عن التلفزيون الخاص بكم قم بضبط خيار حجم الصورة في جهازك الخارجي أو على التلفزيون ليكون إلى ملء الشاشة.

